




Dell Inspiron 530 DCMF Bios Battery Replacement

This will show you how to replace your computer's bios battery

Written By: Drew Cunningham

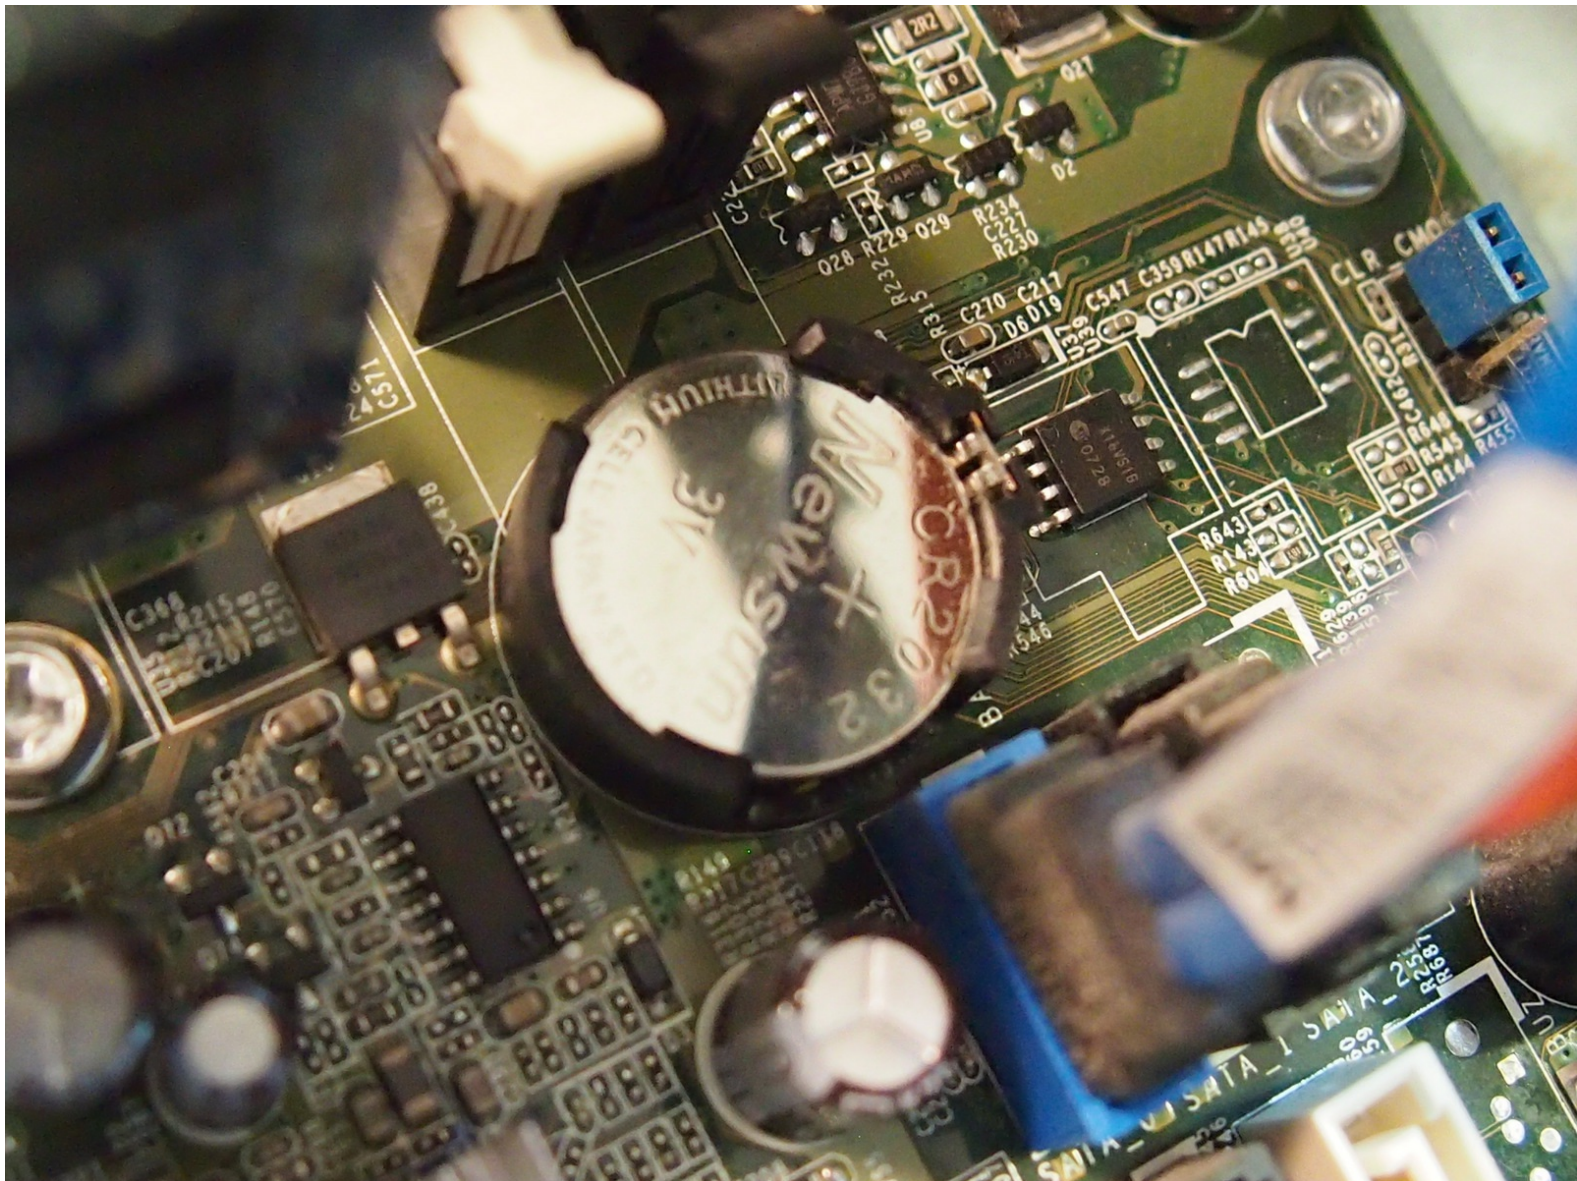

INTRODUCTION


Replacing the battery is easy, you pop out the old one and pop in the new one.



TOOLS:




- [Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Bios Battery

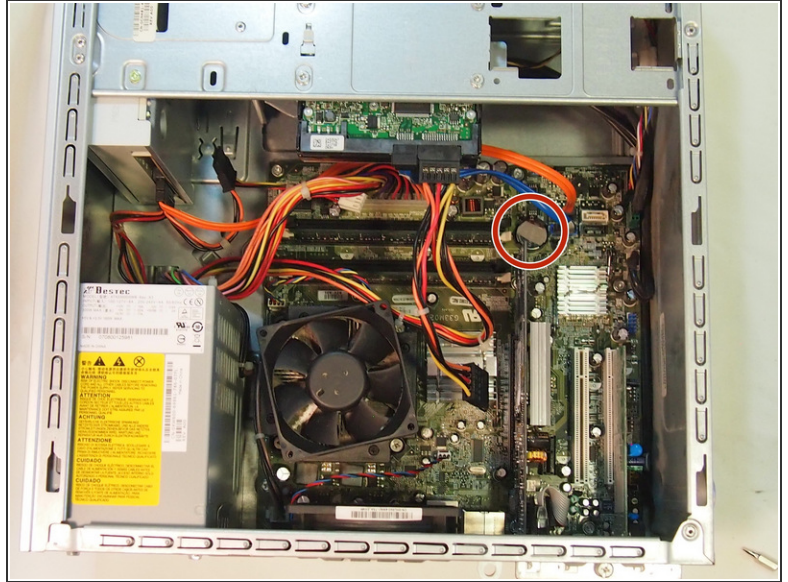

- Unscrew the two screws shown that are holding on the side panel. Then slide the side panel towards the back to remove it.

Step 2

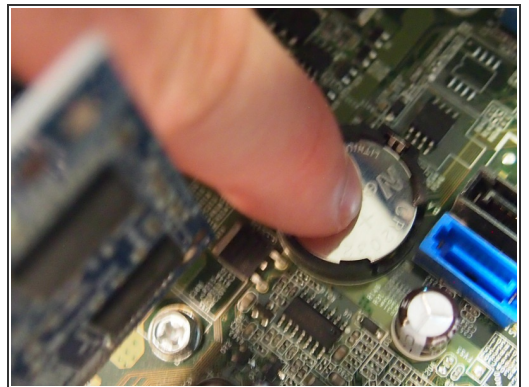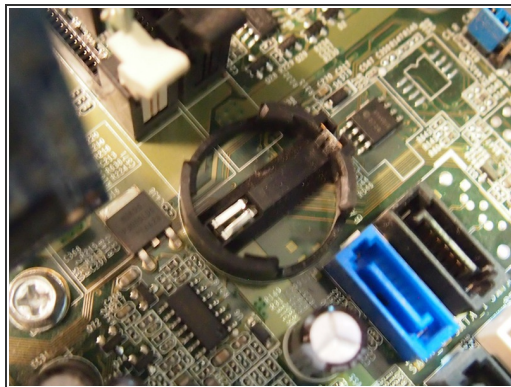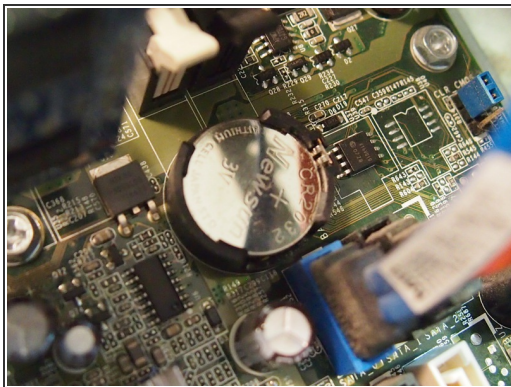

- Locate the Bios battery as shown. Using your fingers or a spudger, pop it out from the side.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 05:18:41 AM.